

WS1
Fujix Pictography Printer

Routine operation

- Turn on main switch (found on upper LHS of Pictography printer), wait until it has started up, and display reads **DataReady320***
- **Restart** computer workstation WS1 and log in
- Open your images in **Photoshop 6**
- Go to File\Print and select Fujix Pictography from the drop down list, then click on Print
- Turn off printer and log out

***If you get an error message 'water change' instead of 'DataReady320'**

- Usually, it is safe to 'trick' the printer into 'thinking' it has had a water change
- Make sure Pictography is turned on
- Open front door and lift reservoir completely out of its cage, then simply put it back again and close door.
- Water change light should go out, printer should now say DataReady320

**Every 3 - 4 months, the water should actually be changed
(when water level is critical or if water looks mouldy)**

- Make sure Pictography is turned on.
- Open door and release tube from reservoir mouth, 'parking' it in special holder on door.
- Remove reservoir, pour old water down sink, refill with **de-ionised** water.
- Replace reservoir, replace tube, water change light should go out, printer now ready for use.